

GLAUNACH

Operating Manual - Vent Silencers



INDEX	Page
1. GENERAL	3
1.1 Preface	3
1.2 Area of Application	3
2. FUNDAMENTAL SAFETY REGULATIONS	3
2.1 Remarks	3
2.2 Obligations of the Plant Owner.....	3
2.3 Obligations of the Installation Personnel	3
2.4 General Warnings.....	4
2.5 Use of Silencers.....	4
2.6 Guarantee.....	4
2.7 Safety Precautions.....	5
2.8 Danger of Pressurized Gases.....	5
2.9 Danger of Medium and Heat.....	5
2.10 Noise.....	5
3. TECHNICAL SPECIFICATION	5
3.1 Drawings, Specifications and Part Lists.....	5
3.2 Name Plate.....	6
4. TRANSPORT AND STORAGE	6
5. INSTALLATION	6
5.1 Conditions for Installation	6
5.2 Connecting the vent silencer to pressure units	7
6. FIRST START-UP	7
7. OPERATION	7
7.1 General.....	7
7.2 Inappropriate Use.....	7
7.3 Constructional Changes at the Silencer	8
7.3 Avoiding of faults	8
8. MAINTENANCE	8
9. RECURRING EXAMINATIONS BY CERTIFIED SUPERVISORS	8
10. ASSOCIATED DOCUMENTS	8

1. GENERAL

1.1 Preface

Vent Silencers are used for noise reduction of expanding gases and steam. The diffuser pipe (= entrance pipe to the silencer) with the appropriate components represents a pressure loaded device in the sense of the guideline 97/23/EG and is classified as part of the piping-system in accordance with appendix II diagram 7.

1.2 Area of Application

This manual exclusively applies for Glaunach Vent Silencers, which are marked by identification plates on each unit. Vent Silencers are part of a system, for that reason the general plant manuals as well as this manual applies for operation.

2. FUNDAMENTAL SAFETY REGULATIONS

2.1 General

This manual contains all important instructions, in order to operate the Rental Vent Silencer safely. The safety references have to be considered by all persons who are close to the silencer during blow out. Beyond that, the local rules and regulations for safety have to be kept.

2.2 Obligation of the Plant Owner

The plant owner has to take care that personnel which is close to the silencer during blowout

- have been informed about the regulations and safety rules
- have permanent access to this informations
- read and understand this manual.

The competences of the personnel for mounting and installation have to be clearly specified. All instructions have to be held in a readable condition.

2.3 Obligations of the Installation Personnel

All individuals, working on vent silencers have to read

- the safety rules of the plant owner
- this manual

2.4 General Warnings

Glaunach Vent Silencers are built with the use of the latest technology. However, inappropriate use can become lethal and can cause damage to objects of value. Vent Silencers are only intended for permissible use, under the maximum allowable operating conditions = design conditions.

Disturbances, which may impact security, have to be eliminated immediately.

2.5 Use of Silencers

Vent Silencers are exclusively for the use of reducing noise that occurs by expanding gases. Informations of the applicable medium, temperature and pressure can be found on the name plate of each unit.

Safe use means:

- Execution of all advises of this manual
- Execution of maitenance
- Attention to the name plate, specification sheets and warning references

Any other use, e.g. rinsing or cleaning of the piping system by blowing free, are not an intended use of the silencer !

2.6 Guarantee

If no other guarantee is constituted , the guarantee period is 24 month after delivery.

The guarante expires:

- If the silencer is used under not permissible conditions.
- At inappropriate mounting, installation, handling and/or maintenance
- Neglection of regulations in this manual concerning transport, storage, handling, operation and/or maintenance of the vent silencer
- If structural changes of the silencer were done without the permission of Glaunach GmbH
- At any deviation of the specified conditions
- At emergencies caused by nature, war or any other event that can not be affected by Glaunach GmbH.

Silencers that are in use under corrosive conditions are subjected to a special wear and do not hold any guarantee without extra notice.

2.7 Safety Precautions

Previous to the use of the silencer a visual control of the surrounding is necessary to prevent hazards for persons and/or values.

2.8 Danger of Pressurized Gases

All pressure – bearing components must be kept depressurized during repair work.

2.9 Danger of Medium and Heat

Individuals staying close to the vent silencer during blow-off, risks danger for life and health. For that reason the responsible authority and/or department has to take care that the vicinity of the vent silencer is evacuated during operation. Due to the high temperature of the vented medium, a substantial temperature of the exterior surface of the vent silencer may occur.

For silencers with high temperatures an insulation may be necessary, which is not scope of supply (See Glaunach Information Brochure: Information 9 „Insulation“.)

Note: Steam may also vent through the dewatering pipes of the silencer. For dewatering pipes the same Safety Precautions apply as for the silencer.

2.10 Noise

During the use of the vent silencer a noise arise at the silencer outlet or at the piping system that may lead to hearing loss. Persons near this area have to wear an appropriate ear protection.

3. TECHNICAL SPECIFICATION

3.1 Drawings, Specifications and Part Lists

All technical information can be found at the drawings, specifications and part lists

These are

- Max allowable design pressure
- Max allowable design temperature
- Max allowable capacity
- Medium
- Materials
- Dimensions

3.2 Name Plate

Following operation data are indicated on the name plate of each silencer.

- Manufacturer
- Fabrication Number
- Design Pressure
- Operation Pressure
- Design Temperature
- Operation Temperature
- Year of construction
- Capacity
- Medium

4. TRANSPORT AND STORAGE

All silencer surfaces and sealings have to be protected during transport and storage. Protection materials shall be used if the silencer is not stored or transported in a box or container. Sealings (e.g. flanges) have to be protected by additional protection materials until the time of installation.

Only the lifting lugs shall be used for lifting, attachments to any other part of the silencer are not allowed.

Storage shall only be done on an appropriate ground and/or on original silencer pallets. Punctual load may lead to deformations.

All pipes and/or flanges associated to the silencer have to be sealed for transportation. Removal of such sealings shall only be done by qualified personell at the time of installation.

(See also Glaunach Information Brochure: Information 7 „Mounting“.)

5. INSTALLATION

5.1 Conditions for installation

The silencer has to be handled in such a way that persons are not endangered. Necessary protection distances and safety precautions are to be kept according to the applicable national regulations and rules of the country of installation. Silencer shall only be mounted to the intended construction. All dimensions can be found at the drawings. The silencer has to be protected against mechanical forces that may occur during operation.

5.2 Connecting the vent silencer to pressure units

The silencer has to be installed onto suitable connections. Forces, moments or vibrations on the connection shall be avoided. This includes also heat caused elongations of the pipe system during operation.

Weldings has to be done according to the appropriate standards.

Dewatering pipes have to be protected from freezing.

(See also Glaunach Information Brochure: Information 7 „Mounting“.)

6. First Start-Up

First Start-Up may take place if

- the silencer was duly installed to the system
- The installation instructions were obeyed
- the silencer was controlled by qualified personell regarding mounting and connection

The final release before first start-up has to be arranged by the operator of the vent silencer according to the national rules and regulations of the country of installation.

7. OPERATION

7.1 General

The operator of the vent silencer has to take care that only instructed personnel will operate the silencer. The operator has to protect persons from any danger that a vent silencer may cause during operation.

A safety zone around the silencer has to be considered. The operator must provide an appropriate operating instruction system, so that his personnel can be sufficiently advised.

The operator of the silencer has to consider all national regulations of the country of installation according to vent silencers.

7.2 Inappropriate use

If the silencer was overloaded, e.g. from an unexpected reaction or as a result of inadmissible loads during the operation or if the silencer was damaged before, during or after operation, an special examination of the silencer has to take place.

7.3 Constructural changes at the silencers

No constructional changes of the vent silencer are allowed without the written permission of the manufacturer. This includes also the attachment or removing of any kind of parts.

7.4 Avoiding of faults

- Increase of vent pipe in a short distance before the silencer (high pressure loss, high sound emission)
- Long distance of piping outside of building (sound emission)
- Arrangement of silencers beside building (damage of building, noise reflection)
- Dewatering into the vent pipe (pollution by sand, dust and bird excrements)
- Long dewatering pipe (hazard of freezing)

8. Maintenance

The operator of the silencer has to take care, that the silencer outlet will be free from impairing parts (e.g. water, ice, dust etc)

9. RECURRING EXAMINATIONS BY CERTIFIED SUPERVISORS

The Plant Owner has to arrange recurring examinations by certified supervisors if this is demanded by the national rules and regulations of the country of installation.

10. ASSOCIATED DOCUMENTS

- Pressure Equipment Directive 97/23/EG
- Harmonised Standards
- national rules and regulations of the country of installation
- Glaunach Information 7 „Mounting“
- Glaunach Information 9 „Insulation“
- Glaunach Information 11 „Avoidance of faults“



Name: Written:
Herbert Dirninger
Date: 03.03.2005
Signature:

Examined:
Dieter Happenhofer
04.03.2005

Released:
Alexander Glaunach
07.03.2005